

MysticTan HD System TouchPad operation

Manual enable -- Enables a session
 This button operates only if the manual enable mode is selected (by the switch inside controller). If the inside switch is "off" than enable will be activated by the T-max or other salon manager only.

Manually purge the unit.
 Also used to cancel a session by holding down for 3 seconds.

Use this button to select the AUTO RINSE mode to automatically rinse 1 minute after a session is over. To select auto rinse hold button down for 3 seconds before unit is enabled.

Also can be used to manually rinse unit for 1 minute. Press RESET/PURGE to stop rinsing at any time.

Power - Indicates main power is on

Indicates AUTO RINSE mode is selected (hold down rinse button 3 seconds to select

Indicates unit is enabled
 Steady green light = single cartridge mode
 Slowly blinking green light = dual cartridge mode.
 After a session this light blinks to indicate unit is ready to be rinsed.



Multi-message select

Exhaust fan and heater (low and high) manual operation

Dual cartridge mode - After enabling, this button can be used to select the dual cartridge mode. (the status 1 light blinks slowly when dual cartridge mode is selected.) After the first session the unit can be enabled for the second cartridge by the customer passing hand in front of the start sensor.

Status 2 and 3 lights help with system troubleshooting.
 Flashing yellow light - drain pump.
 Steady red - low air pressure.
 Flashing red - blocked sensor.
 Alternating lights - slider movement