


SUNVISION PRO 24SF CANOPY

LINE INPUT → P2 P1 ← BENCH
 REMOTE → P3

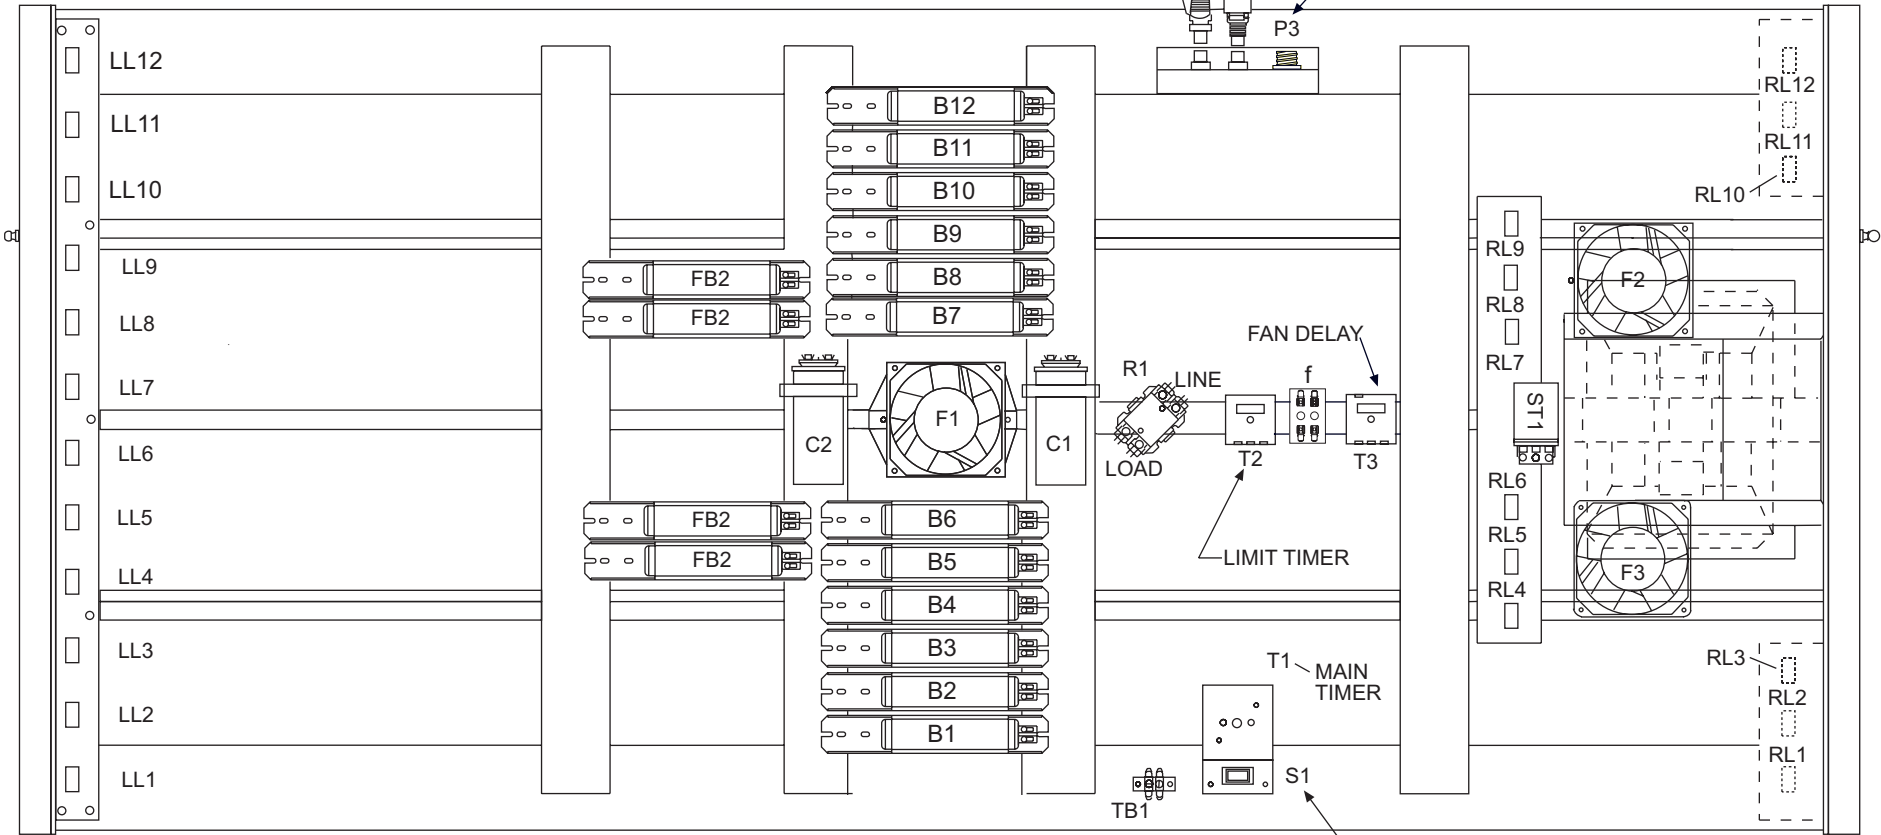

LL = LEFT LAMP HOLDER
 B = BALLAST
 F = FAN
 R = RELAY (CONTACTOR)
 TB = TERMINAL BLOCK
 S = SWITCH
 f = FUSE

RL = RIGHT LAMP HOLDER
 C = CAPACITOR
 P = POWER
 T = TIMER
 ST = FACE TANNER STARTER
 FT = FACE TANNER
 FB = FACE TANNER BALLAST

FRONT OF BED

FACE TANNER SWITCH




6220 CHURCHMAN BYPASS
 INDIANAPOLIS, IN 46203

22216 REV. B


SUNVISION PRO 24SF CANOPY

NOTE:
1. WIRE COLORS MAY NOT BE EXACTLY AS SHOWN.

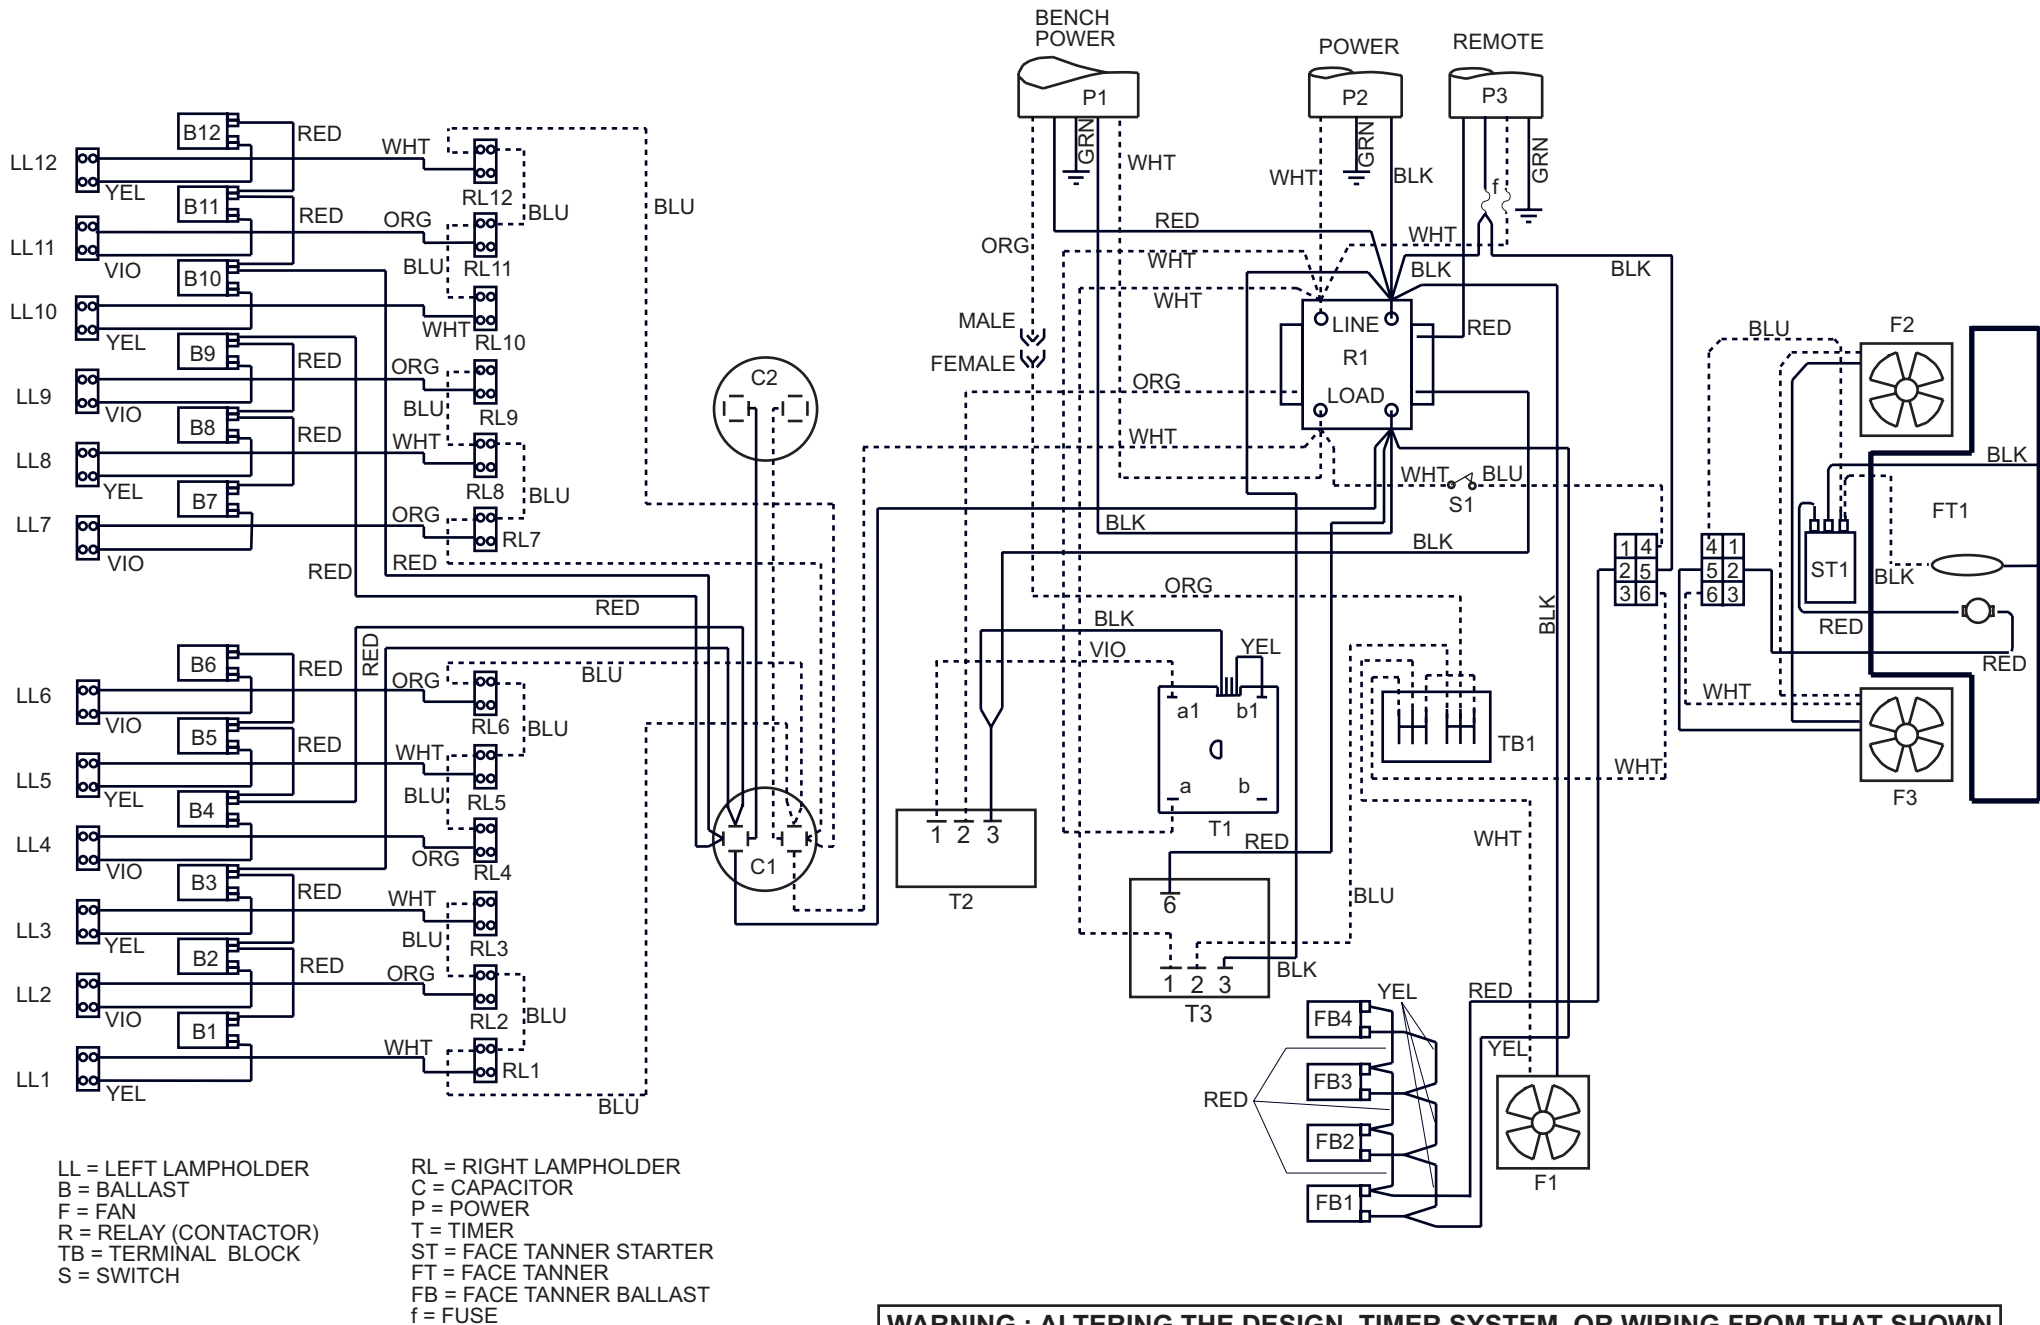

WARNING : ALTERING THE DESIGN, TIMER SYSTEM, OR WIRING FROM THAT SHOWN HEREIN, WILL VOID THE WARRANTY, AND MAY RESULT IN A VIOLATION OF FEDERAL LAW.

SUNVISION PRO 24S BENCH

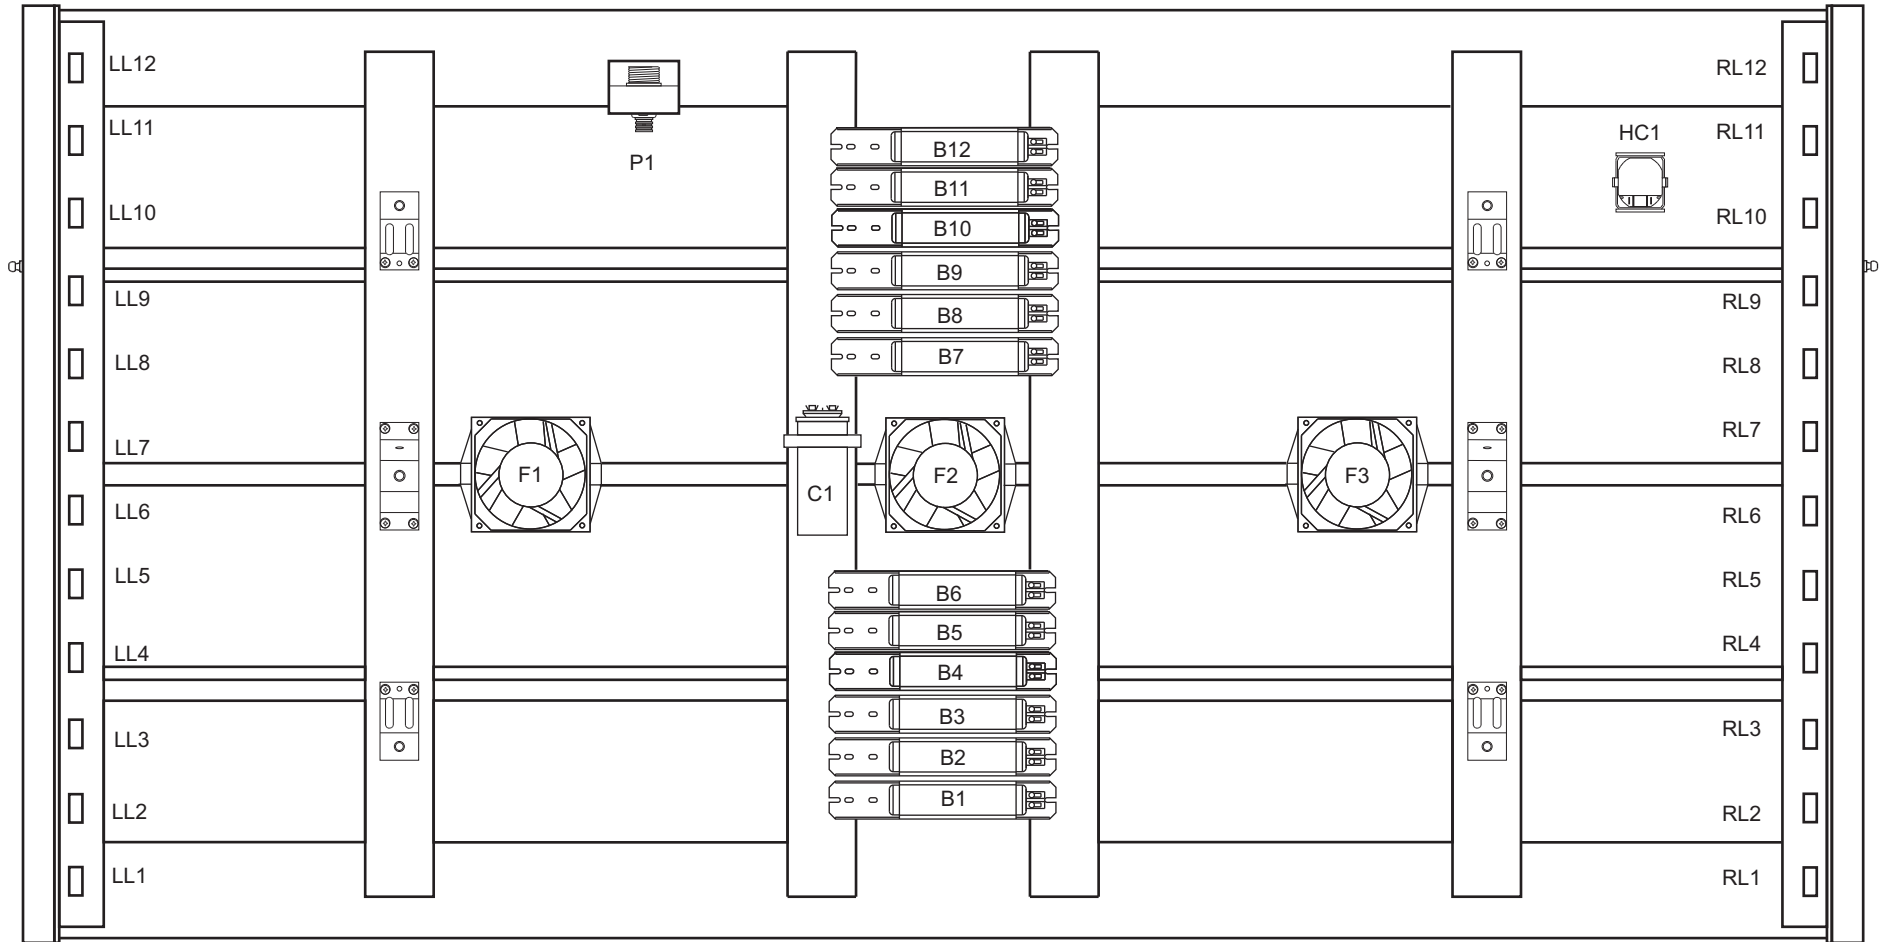

LL = LEFT LAMPHOLDER
 B = BALLAST
 F = FAN
 HC = HOUR COUNTER

RL = RIGHT LAMPHOLDER
 C = CAPACITOR
 P = POWER




6220 CHURCHMAN BYPASS
 INDIANAPOLIS, IN 46203

22224 REV. A

SUNVISION PRO 24S BENCH

NOTE:
1. WIRE COLORS MAY NOT BE EXACTLY AS SHOWN.

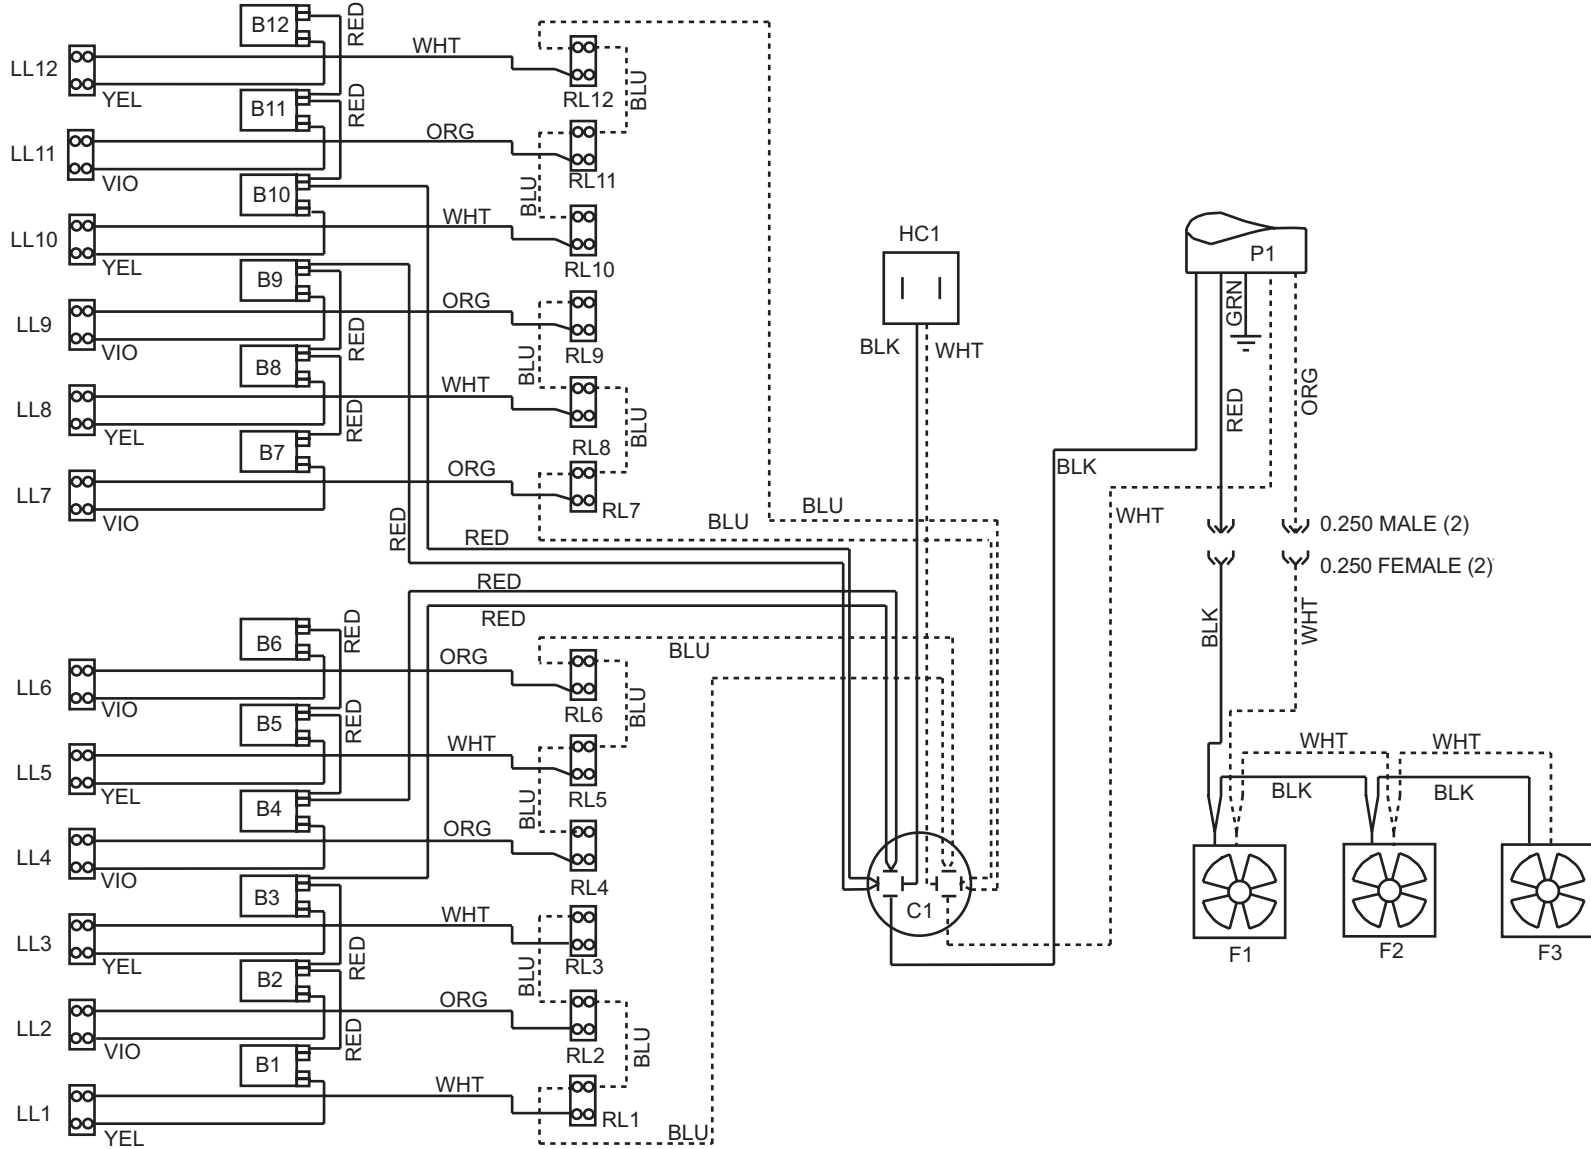

LL = LEFT LAMPHOLDER
B = BALLAST
F = FAN
HC = HOUR COUNTER

RL = RIGHT LAMPHOLDER
C = CAPACITOR
P = POWER JACK

WARNING : ALTERING THE DESIGN, TIMER SYSTEM, OR WIRING FROM THAT SHOWN HEREIN, WILL VOID THE WARRANTY, AND MAY RESULT IN A VIOLATION OF FEDERAL LAW.