
Sauna Wellness PRO 10 Installation

Please use this guide along with Owner's Manual pgs. 6-9

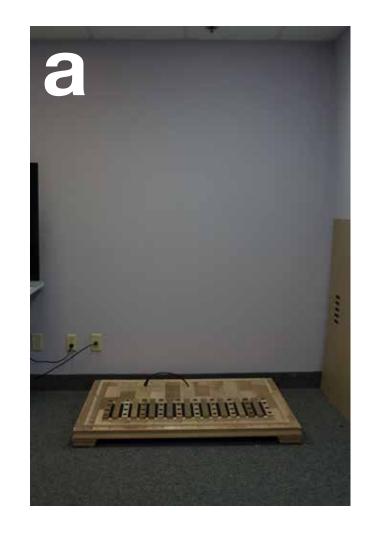





- A. Place base where the Sauna will be permanently located.
 Allow 6 inches clearance from wall for installation.
- B. Put up back wall & manually hold in place.
- C. 1.Put up left side panel.
 Align with back panel
 and slide & click into
 place.
 - 2. Put up right side panel. Align with back panel and slide & click into place.
 - 3. Put up the front seat/heater panel. Hold in place.
 - 4. Slide the seat panel into place.
- D. Put Front panel on. Ensure alignment with left and right side panel to slide and click into place.
- E. Align cabin top on Suana.
 Bring electrical
 connection from the left
 panel through the hole
 on the the cabin top.
 Secure the top into place
 & connect all electrical
 on top.

