



**4251 N.E. Port Drive
Lee's Summit, MO 64064
800-554-8268**



Owner & Assembly Manual

Les Spécifications Françaises Enclos

Table Of Contents

3Welcome
4Unpacking Instructions
5 - 7Legacy Leg Tanner Specifications/Exposure Schedule
8Warnings And Cautions
9Repairs
9Service
9Replacement Parts And Lamps
9Eye Protection
10Care And Cleaning
11Relamping
12 - 19Timer System
20 - 23Legacy Leg Tanner Wiring Diagrams
24Limited Warranty

Welcome

Dear Valued Customer:

Congratulations! You have just purchased one of the finest pieces of tanning equipment available to the indoor tanning industry. We at Heartland Tanning, Inc. sincerely appreciate your business.

The America's best tan™ line is manufactured right here in the heart of our country. Our tanning equipment are constructed of 12GAUGE solid steel and are designed to hold up under heavy use. We have confidence in our beds and that is why our entire tanning bed line is backed by Heartland's unprecedented 3 year limited warranty. Designed to be user friendly, the beds are easy to assemble and easy to maintain.

Please read your owner & assembly manual thoroughly prior to the first use of your new tanning bed.

Heartland Tanning, Inc.
4251 N.E. Port Drive
Lee's Summit, MO 64064
1-800-554-8268

The word "Legacy" is written in a large, black, serif font. A decorative horizontal line with upward-curving ends is positioned beneath the letters "e", "g", and "a".

NOTICE: Any misuse, abuse, modifications, alteration, improper installation, etc. of this product or its intended use will subject said party to direct responsibility for any and all consequences resulting from such action. Furthermore, such actions will void all warranties and may relieve Heartland Tanning, Inc. of any liabilities relating to said product.

UNPACKING INSTRUCTIONS

Unit is shipped assembled in 1 carton with the chair assembled in 1 carton on top and banded.

TO REMOVE:

1. Cut band and remove from carton.
2. Remove top container with chair enclosed and unbox and set to the side.
3. Remove cardboard top and sleeve from bottom container exposing unit.
4. Remove both screws retaining shipping brackets from each corner of unit.
5. Remove all shipping plastic and foam from unit and dolly.
6. Carefully remove unit from shipping skid one end at a time. NOTE: This requires 2 persons, 1 at each end to support unit as it comes off skid.
7. Take moving dolly (supplied) and position under hook at foot end of unit.
8. By pressing handle of dolly down you can move and position unit to final location.
9. With unit in final location, attach chair to unit at timer end using (2) 3/8 hex cap screws and washers (supplied).
10. Keep dolly for any need to move unit in the future.

LEGACY LEG TANNER

LENGTH:	57"L X 31"W (UNIT ONLY) 80"L X 31"W (WITH CHAIR)
WEIGHT:	300LBS
NUMBER OF LAMPS:	36
ELECTRICAL DRAW:	17AMPS @ 220VOLTS*
CIRCUIT REQUIRED:	220VOLTS, with ground, 20AMP Breaker

*NOTE: Amperage will vary depending on voltage.

MELANIN - The brownish pigment produced by special cells in the base layer of the skin determines the individual's tan. As the skin is exposed to the ultraviolet light, the melanin is activated and combines with protein cells that rise to the skin's surface, thus producing a tan. The amount of melanin in your body determines how quickly and dark you tan. The more melanin produced and exposure time an individual has, the faster and deeper the individual will tan.

NOTE: The tan produced by the Legacy is a deep, rich "COSMETIC" tan. However, regardless of how dark an individual may tan on this system, it will not provide adequate protections against overexposure to natural sunlight or UVB tanning systems.

SKIN TYPE II - This is the individual that usually burns easily and severely, tans minimally or lightly and peels
SKIN TYPE III - Often referred to as "AVERAGE" complexion. burns moderately and tans about average
SKIN TYPE IV - This individual burns minimally, tans easily and above average with each exposure
SKIN TYPE V - This individual rarely burns, tans easily and substantially

IMPORTANT NOTE:

Customers that wear contact lenses, should be made aware that the heat and ventilation wind may dry out their contacts and should be removed prior to the session. Use only creams, oils or lotions (particularly suntan lotions) that are recommended by Heartland Tanning, Inc. Equally important - many facial makeups have oil bases and sun block should be removed prior to a session.

It is recommended that following a tanning session, a skin moisturizer be applied. This promotes a smoother, more even looking tan.

LEGACY LEG TANNER

DANGER - ULTRAVIOLET RADIATION. Follow instructions. Avoid overexposure. As with natural sunlight, overexposure can cause eye and skin injury and allergic reactions. Repeated exposure may cause premature aging of the skin and skin cancer. **Wear protective eyewear: failure to may result in severe burns or long-term injury to eyes.**

Medications or cosmetics may increase your sensitivity to the ultraviolet radiation. Consult physician before using sunlamp if you are using medications or have a history of skin problems or believe yourself especially sensitive to sunlight. If you do not tan in the sun, you are unlikely to tan from the use of this product.

This system is intended to be used only with DuraSun Legacy FR42.5T12/XGS 85 watt lamps.

Questions on Sales or Service

Follow recommended exposure schedule for the skin type.

Heartland Tanning, Inc. • Lee's Summit, MO • 1-800-554-8268

RECOMMENDED EXPOSURE SCHEDULE					
Skin Type	Week1 1st - 3rd Treatments	Week2 4th - 6th Treatments	Week 3 7th - 10th Treatments	Week 4 11th - 15th Treatments	Weekly Subsequent Treatments
II - Fair	2MINUTES	4MINUTES	6MINUTES	8MINUTES	8MINUTES
III - Average	2MINUTES	4MINUTES	6MINUTES	8MINUTES	8MINUTES
IV - Brown	2MINUTES	6MINUTES	8MINUTES	10MINUTES	10MINUTES
V - Dark Brown	2MINUTES	6MINUTES	8MINUTES	10MINUTES	10MINUTES
MAXIMUM EXPOSURE TIME IS 10 MINUTES					
This product is in comformity with performace standards for sunlamp products under CFR 21 Part 1040					

This unit utilized UVA lamps. **Replace only with DuraSun Legacy FR42.5T12/XGS 85 watt lamps.** The minimum exposure position is .5 inches (1.27 cm) from the lamps surface (preset by the mfg.). Read the instruction booklet before using this device. To use, lie down under canopy and pull down as far as adjustment will allow. **CAUTION: THE USE OF ANY OTHER POSITION MAY RESULT IN OVEREXPOSURE.**

Tanning can begin on a regular basis. An appearance of tanning normally appears after a few exposures and maximizes after four (4) weeks of exposure. **Use protective eyewear** whenever equipment is energized. Read the instruction booklet before using.

Caractéristiques - LEGACY LEG TANNER

longueur : 57 pouces par 31 pouces (Unit)
80 pouces par 31 pouces (Chair)
poids d'expédition : 300 livres
nombre de lampes : 36
aspiration électrique : 17 ampères à 220 volts
circuit requis : 220 volts, double poteau, briseur de
de 20 ampères, avec disjoncteur
différentiel, briseur de 20 ampères

DANGER – RAYONNEMENT ULTRAVIOLET. Suivez les instructions. Évitez la surexposition. Comme avec les rayons naturels du soleil, la surexposition peut causer dommage aux yeux et à la peau et des réactions allergiques. L'exposition répétée peut causer le vieillissement prématuré de la peau et du cancer de la peau. **Portez des lunettes protectrices; le non-respect de cette consigne peut entraîner de graves brûlures ou des lésions oculaires à long terme.**

Les médicaments ou les produits de beauté peuvent augmenter votre sensibilité au rayonnement ultraviolet. Consultez un médecin avant d'utiliser la lampe solaire si vous utilisez des médicaments ou avez une histoire des problèmes de peau ou croyez-vous particulièrement sensibles aux rayons du soleil. Si vous ne bronzes pas au soleil, il est peu probable que vous bronzerez avec l'utilisation de ce produit.

Questions au sujet des ventes ou de service : Heartland Tanning, Inc. • Lee's Summit, MO – 1-800-554-8268

Suivez le programme recommandé d'exposition pour le type de peau.

Cette appareil utilise des lampes de l'ultra-violet A. Remplacez seulement avec les lampes de marque **DuraSun Legacy FR42.5T12/XGS 85W lampes**. La position minimum d'exposition est à 0,5 pouces 1,27 cm) de la surface de la lampe (instituez par le manufacturier). Lisez le livret d'instruction avant d'utiliser ce dispositif. Pour utiliser, couchez-vous sous l'écran et abaissez dans la mesure où le réglage laissera. **ATTENTION : L'UTILISATION DE N'IMPORTE QUELLE AUTRE POSITION PEUT AVOIR COMME CONSÉQUENCE LA SUREXPOSITION.**

Le bronzage peut commencer de façon régulière. Un aspect de bronzage normalement apparaît après quelques expositions et atteint son niveau maximal après quatre (4) semaines d'exposition. **Utilisez des lunettes protectrice à chaque fois que l'appareil est active.** Lisez le livret d'instructions avant l'utilisation.

Horaire d'exposition recommandé					
Type de peau	Semaine 1 1er – 3e Traitements	Semaine 2 4e – 6e Traitements	Semaine 3 7e – 10e Traitements	Semaine 4 11e – 15e Traitements	Bihebdomadaire Traitements subséquents
II – Claire	2 MINUTES	4 MINUTES	6 MINUTES	8 MINUTES	8 MINUTES
III – Moyen	2 MINUTES	4 MINUTES	6 MINUTES	8 MINUTES	8 MINUTES
IV – Foncé	2 MINUTES	6 MINUTES	8 MINUTES	10 MINUTES	10 MINUTES
V – Très foncé	2 MINUTES	6 MINUTES	8 MINUTES	10 MINUTES	10 MINUTES
LE TEMPS MAXIMUM D'EXPOSITION EST DE 10 MINUTES					
Ce produit est conforme aux normes de rendement pour des produits de lampe de soleil tel que stipule la partie 1040 du document CFR 21.					



WARNINGS AND CAUTIONS

Certain drugs - particularly those designed to produce photosensitivity - may cause individuals under the influence of this type drug to experience adverse effects and those people should avoid exposure to UV sources of all type. Doctors will advise persons taking these drugs of possible adverse effects.

It is recommended that only one (1) person at a time should use the tanning system, and advise using protective eyewear while using the tanning unit. Two (2) pair of protective eyewear are provided with each tanning bed sold.

WARNING

If you have been diagnosed by physician as being allergic to the sun or are currently taking photosensitive medications, consult you physician before using the tanning unit.

CAUTION

While there is no immediate clinical evidence regarding UVA exposure and its effects upon expectant mothers, it is strongly advised that expectant mothers be discouraged from using the tanning unit.

MANDATORY READING

ALWAYS FOLLOW INSTRUCTIONS FOR PROPER USAGE PRIOR TO USING ANY TANNING SYSTEM

REMEMBER

1. Follow the exposure schedule in accordance with you skin type. Failure to do so may result in overexposure.
2. Replacement lamps must comply with CFR 21 1040.20. When ordering lamps, include model number and serial number. See Lamp Guide on page 10 for the appropriate lamp replacements for your tanning equipment.

Should you have any questions regarding the proper use of your tanning system, contact Heartland Tanning, Inc. at:

1-800-554-8268
8:00AM to 5:00PM (CST)

REPAIRS - SERVICE - REPLACEMENT PARTS AND LAMPS - EYE PROTECTION

If you are in need of any of the above mentioned products or services, you should contact the dealer/distributor through whom you purchased your unit. In the event that you are unable to do so, please call our Service Department for assistance at: 1-800-554-8268.

NOTE: All repairs and replacement components including, but not limited to, protective eyewear, lamps, timers and acrylic must be in compliance with CFR21 1040.20.

**NOTE: Electrical connection to power supply,
must be in compliance with NECA
regulations and performed by
a qualified electrician.**

**Warning:
Wear protective eyewear; failure to may result
in severe burns or long-term injury to eyes.**

CARE AND CLEANING OF YOUR TANNING EQUIPMENT

After each session is completed, spray acrylic with a specially formulated UVT (ultra-violet transmitting) acrylic cleaner. Wipe the acrylic with a clean cloth. The acrylic should never be wiped with a dry cloth because this will generate a slight static charge which will attract dust. A mild liquid detergent and water solution can be used temporarily in place of acrylic cleaner.

For maximum efficiency of your tanning equipment, periodic cleaning of lamps is required. Refer to relamping instructions for acrylic removal.

CAUTION: Do not use excessive amounts of water, any abrasive cleaners, or any spray cleaner that carry label warnings regarding reactions to contact with skin!

DO NOT USE ALCOHOL

ELECTRICAL SAFETY: The tanning unit should be disconnected from the power supply before cleaning or any repairs are made! Avoid water or solution entering the lamp compartment.

America's best tan™

RELAMPING INSTRUCTIONS

1. Disconnect power from unit.
2. Remove acrylic strips and slide acrylic out of the unit.
3. Turn the bi-pin lamp 90 degrees and remove from lampholder.
4. Align the bi-pin lamp and slide the top and bottom into the lampholder turn 90 degrees.
5. Clean and replace acrylic. (Refer: care and cleaning instructions.)
6. Reconnect unit to power.

CAUTION

Replacement lamps must comply with CFR 21 1040.20

When ordering lamps, include model number and serial number.

LAMP GUIDE

Replace only with DuraSun Legacy FR42.5T12/XGS 85 watt lamps.

* Please note - when removing canopy acrylic from these units - requirement is 2 people, 1 person at each end of bed for ease of removal and installation.

USE AND GUIDE TO TIMER SYSTEM

(C) COPYRIGHT 1999 by Salon Systems, Inc.

The information in this manual is believed to be correct. However, Salon Systems, Inc. assumes no responsibility for any errors herein.

This information is subject to change without notice, and should not be construed as a commitment by Salon Systems, Inc.

A factory 3 second delay between all functions is standard on all Ovation™ beds.

TIMER WARRANTY

This product is warranted against defective materials and workmanship for a period of one year from date of purchase. In the event the product fails to perform, it may be returned; Shipping Paid, to the factory to be serviced or replaced at the factory's discretion. Salon System, Inc. will pay to ship the repaired or replaced product by the shipping means of our choosing. Returns will not be accepted without a Return Authorization Number assigned by the factory. It is a Condition of Sale that the user of Salon Systems, Inc.'s products assumes all risk and responsibility of use and indemnifies Salon Systems, Inc. against all damages. Salon Systems Inc. is not liable for loss of profits, loss savings, special, incidental, consequential, indirect or other similar damages arising from breach of warranty, breach of contract, negligence, or other legal action even if Salon Systems, Inc. or its agent has been advised of the possibility of such damages, or for any claim brought against you by another party. This warranty allocates risks of product failure between the Purchaser and Salon Systems, Inc. Salon Systems, Inc.'s hardware pricing reflects this allocation of risk and the limitations of liability contained in this warranty. It is a violation of the stated warranty to cut or modify the provided modular cables supplied with the T-Max Series Timers. Connection the T-Max Series to third party timers not approved by Salon Systems, Inc. also violates the stated warranty. Contact your dealer or Salon Systems, Inc. if you are not sure if the timer that you are connection is an approved timer.

T-Max/004 OEM Installation and User's Guide

OVERVIEW

Congratulations on your purchase of Salon Systems, Inc.'s T-Max Series of tanning bed timers. The T-Max Series is designed for complete automation and control of your tanning equipment.

A Heartland Timer is an OEM board that can be installed in a tanning bed or tanning booth. Each Heartland Timer can individually control a tanning bed, can be connected back-to-back with a T-Max 1A or T-Max 3A for remote front desk control or be connected with many Heartland Timers and a T-Max Manager or Manager/Plus to control many beds from a remote location. Operation is accomplished via front panel controls. This manual should be used by the licensed electrician installing your T-Max timing system. Check for compliance with local building codes.

CONFIGURATION

Setting Parameters

Note: If you are using a T-Max Manager or T-Max Manager/Plus and multiple Heartland Timers, remove power from the T-Max Manager or T-Max Manager/Plus and keep the power removed until all parameter changes are complete.

1. Press and hold the Start/Stop and the Up buttons simultaneously on the Heartland Timer. As soon as you see a ".1" on the display release the buttons. This should take about 5-6 seconds. This is an indication that you are in the parameter mode. The numbers currently displayed represents the parameter number that you can observe or change.
2. Press the Up and Down buttons until the parameter number that you want to observe or change is displayed.

- 3 Press the Start/Stop button. The current value for that parameter will be displayed and flashing.

The Heartland Timer will show a number with a period illuminated in the lower center of the display. The number shown is the current value for that parameter.

For Lamp, Session Counts, etc. the value displayed can be as high as 9999. To display this value, the Heartland Timer will flash tow numbers-three times, then two numbers-three times, pause, two numbers-three times, two numbers-three times, pause, etc. For example, if you are checking lamp hours (Parameter 6) and the display flashes the numbers 53 three times, then 14 three times, pauses then repeats, then the total lamp hours stored in that Heartland Timer is 5314.

4. Press the Up and Down buttons to change the parameter to the desired value.
If you want to clear the value for that parameter, press the Up and Down buttons at the same time until the display shows 0.0.
5. Press the Start/Stop button.
The display will show the parameter number you just change and a solid period in the lower center of the display. You may now change another parameter by pressing the Up and Down buttons until the parameter that you want to change is displayed. Repeat Steps 2-4 for each parameter you want to change.
6. To exit the Parameter mode and make the Heartland Timer available for the next session, press and hold the both Up and Down buttons until the display shows a 0 with no periods displayed.

Setting The Address

Note: If you are using the Heartland Timer as an independent timer, you don't need to set the address on the Heartland Timer.

1. Press and hold the Start/Stop buttons simultaneously on the Heartland Timer until a .1 appears on the display. Release the buttons. This should take about 5-6 seconds.
2. Press and release the Start/Stop button. A number will appear on the display and be flashing. A period will be illuminated in the center of the display. Pressing and holding the Up button will cause the display to count up. Once the count reaches 100, the center period will flash rapidly. This is an indication that you are over 99. For example, if the display shows a 0.2 with the period flashing, this is address 102. The highest the display will count up is 254.
3. Press the Up and Down buttons until the desired address is displayed. When setting the address, remember 3 rules:
 A) Set each Heartland Timer to a unique address. B) Do not set any address to 0.
 C) Do not set any address over 100.
4. Press the Start/Stop button. The ".1" will appear on the display. The 1 will not be flashing.
5. To exit, press and hold both Up and Down buttons until the display shows a 0 with no periods displayed.

Table 1 - Parameter numbers for observing and changing parameters.

Param.#	Description	Max #	Default	Notes
Salon Level				
1	Address	128	1	Set this number to the room number you want the timer to be
2	Beep Mode	1	0	Used for High Power beds. 0=Alarm Only, 1=Alarm and Flip
3	Delay Time	10	3	Delay in minutes stored in the Heartland Timer
5	Session	65535	0	Total Session counts for Heartland Timer Counts
6	Lamp Hours	65535	0	Bulb hours for each bed
7	Bed Hours	65535	0	How many hours a bed is on
8	Manual Session Counts	65535	0	Counts the # of sessions the Heartland Timer Session has run while in Stand Alone Mode
9	Clean Room	1	1	0 = Clean Room Disabled. 1 = Enabled
10	Manual Lockout*	1	0	0 = Stand Alone Enabled. 1 = Disabled
13	Cool Down Mode	10	3	0 = Disabled, 1-10 = Enabled. Time delay in minutes allowing bed to cool. The fans will remain running while the Heartland Timer is in cool down mode.
14	5 Min. Beep	1	0	0 = Disabled, 1 = Enabled. Heartland Timer will beep for 10 seconds every 5 minutes
15	Fixed Session	65535	0	Counts number of sessions ran through the TMax® 3A. This value cannot be changed at all. Used as point of reference.
16	Pulse Mode	1	0	0 = Disabled, 1 = Enabled. When session starts, the relay on the T-Max® 1A will close for 1-2 seconds then open.
17	Clean Clear	1	0	0 = Press and hold the Set button for 3-4 seconds to clear the clean room. 1 = Press and release the Set button to instantly clear the clean room.
18	Redisplay	2	0	0 = After a session ends and the clean room is cleared, the Heartland Timer will show a 0. 1 = After session ends and the clean room is cleared, the Heartland Timer will show the last session time entered. 2 = After the session ends and the clean room is cleared, the max. time will show on the Heartland Timer.
19*	Third Part Interface	1	0	When set to a 1, voltage must be applied by an outside source to the TPI input on the back of the Heartland Timer. Used if the timer is being controlled by either a FST® or Database® Series Timer. See Section for JPI settings

Setting Delay Time

If the Heartland Timer is being controlled by a T-Max 1A, T-Max 3A, T-Max Manager or T-Max Manager/Plus, the delay does not need to be set on the Heartland Timer. The delay is controlled by the controlling device.

1. Press and hold the Start/Stop and Up buttons simultaneously the Heartland Timer until a ".1" appears on the display. Release the buttons. This should take about 5-6 seconds.
2. Press the Up and Down button until a ".3" is displayed.
3. Press and release the Start/Stop button. A number will appear on the display and be flashing. A period will be illuminated in the center of the display. This is the current delay time.
4. Press the Up and Down button until the desired delay time is displayed. The highest delay time that can be set on the Heartland Timer is 10 minutes. If you want no delay time, set the display to 0. If you set the delay time to 0, the session time will start immediately after the Start/Stop button is pressed.
5. Press the Start/Stop button. The ".3" will appear on the display. The 3 will not be flashing.
6. To exit, press and hold both the Up and Down buttons until the display shows a "0" with no periods displayed.

IN-ROOM SINGLE BED CONTROL

Starting A Session

1. Press the Up and Down button on the Heartland Timer until the desired session time is displayed. If the display shows a 0, and you want to count down from the maximum time, press the down button.
2. Press and release the Start/Stop button to start the session. If a delay other than 0 is entered, the delay will count down. A period on the lower right corner of the display will flash rapidly. When the session starts, the period will flash at a once per second rate. If the delay is set to 0, the session will start immediately.

Pausing A Session

To pause the session press the Start/Stop button. The flashing period on the lower right corner of the display will stop flashing and stay illuminated. To restart, press the Start/Stop button on the Heartland Timer. The period on the lower right corner of the display will resume flashing.

NOTE: The session time will continue to count down. The display will continue to update and reflect the remaining session time.

Canceling A Session

To cancel a session, press the Start/Stop button to pause the session then press the Up button. The display will show a solitary 0.

REMOTE SINGLE BED CONTROL

Remote Single Bed Control is the ability to control a single tanning bed from a remote location. T-Max 3A at the remote location is required for this configuration.

Wiring

Wire the Heartland Timer to the tanning bed. Apply power to the T-Max 3A as described in their respective User's Guides.

Run the provided modular cable from the tanning room to the remote T-Max 3A or T-Max 1A. Connect the modular cable to one of the RJ-22 ports on the Heartland Timer and T-Max 1A or T-Max 3A (see RJ-22 ports for T-Max Series timers on page 16, figure B).

Configuration

Set the address on the Heartland Timer in the tanning room to 1. Set the address on the T-Max 3A to 0.0. For setting the delay refer to the T-Max 3A user's guide.

Note: When setting the address on the Heartland Timer in the tanning room, the power to the front desk T-Max 1A or 3A must be off.

Session Control

Starting a session

1. Press the Up and Down button on the T-Max 3A or the Set button on the T-Max 1A at the front desk until the session time is displayed. Time cannot be set from the Heartland Timer in the room.
2. Press the Start/Stop button on the front desk T-Max 1A or T-Max 3A to start the session.

If a delay other than 0 is set, the delay will count down. A period on the lower right corner of the display will flash rapidly.

When the session starts, the period will flash at once per second rate. If a 0 delay is entered, the session will start immediately.

Pause during the Session

To pause the session press the Start/Stop button on the Heartland Timer in the tanning room. The flashing period on the lower right corner of the display will stop flashing and stay illuminated. To restart the session, press the Start/Stop button on the Heartland Timer in the tanning room. The period will continue flashing.

Note: The session time will continue to count down. The display will continue to update and reflect the remaining session time.

Canceling a session

To cancel a session, press both the Start/Stop and Up button on the T-Max 3A at the front desk simultaneously. If you are using a T-Max 1A, press the Start/Stop and the Set buttons simultaneously. The session cannot be canceled from the Heartland Timer.

USING THE HEARTLAND TIMER WITH A T-MAX MANAGER OR T-MAX MANAGER/PLUS/PRO

If you are using Heartland Timers with a T-Max Manager or T-Max Manager/Plus, follow these instructions for proper operation:

1. Set the address on each Heartland Timer.

Note: If this is a first time installation, go through the quick installation procedure in Section 2 of the T-Max Manager or T-Max Manager/Plus user's guides. This will automatically set the address on the Heartland Timers and you will not need to set the addresses manually as described in the following steps. If you need to set the address on the Heartland Timer manually, be sure to set each Heartland Timer to a different address. No Heartland Timer should be set to address 00.

2. Connect each Heartland Timer together using a modular cable that conforms to the pinouts shown on Figure B. Connect T-Max Manager or T-Max Manager/Plus to the closest Heartland Timer in the line (refer to Figure C).

Note: Delay is controlled by the T-Max Manager, the T-Max Manager/Plus or the software you are using if you are using a computer. It is not necessary to set the delay on the Heartland Timer. Refer to the T-Max Manager or T-Max Manager/Plus User's Guide for operation.

OTHER FEATURES

Clean Room

Once a session time has elapsed, the display will show two solid periods only. This is an indication that the room needs to be cleaned. To clear the clean room indication, press and hold the Up button on the Heartland Timer in the tanning room until the two period disappear and a "0" appears. To disable the clean room feature, set parameter 9 to a 0.

Lamp Hours

To check and change Lamp Hours (or any other parameter).

TPI (Third Party Input) Mode

If you are using a FST or Database Series timers, you will need to place the Heartland Timer in the TPI mode.

Connecting the TPI Input

1. Set Parameter 19 to a 1.
2. Connect the two actuator wires from the FST or Database timer to the TPI input in the back of the Heartland timer. When a session is started the FST timer will place 5v on these two wires. If you are using a database Series timer, 24 volts will be applied.

Connecting the TPI output

FST:

1. There are three wires coming from the FST series timer. Two are the actuator wires connected to the signal input. Connect the third wire to one of the switch terminals. Make sure J6 and J7 are on and J4 and J5 are off.
2. Run a jumper from the black actuator wire connected to the other switch screw terminal.

Database:

There are four wires coming from the database series timer. Two are the actuator wires connected to the signal input. Connect the two other wires to the TPI relay output terminal J1. Make sure J6, J4 and J5 are off and J7 is on.
Contact closure

If your external timer is simply a relay contact closure, make sure J4, J6, and J5 are on and J7 is off.

Important: J4, J5, and J7 should never be on at the same time!!!

Operation

When a session is started, voltage will be applied to the TPI input. The display on the Heartland Timer will show the maximum time and count down. When the session ends, the voltage will be removed from the TPI input and the bed will turn off. Any remaining session time showing on the Heartland Timer will be eclipsed.

Note: The Heartland timer can not be used as a stand alone time in the TPI mode.

If the FST or Database Series timers are in delay the Heartland Timer will show a 0. However, pressing the Start/Stop button on the Heartland Timer will eclipse the delay time and start the session. Pressing the Start/Stop button on the Heartland timer will also clear the clean room indication on the FST and Database timers.

Cool down mode

Cool down mode is the time the bed needs to cool down after a session has ended. The Factory default setting is 3 minutes.

1. Connect the wires that control the fans to the headers on the back of the Heartland timer.
2. Set parameter 13 to the desired cool down time.
After a session has ended the display will show a single period in the middle of the display. The period will remain until the cool down time has elapsed. The display will then show a 0.

Note: If both cool down time and clean room are enabled, the clean room will be displayed. If the clean room indication is cleared before the cool down time has expired, the cool down indication will be displayed. If the cool down time has elapsed before the clean room indication has been cleared, the clean room indication will remain until it is cleared.

Figure A - Front View Of The Heartland Timer

Display Board Front View

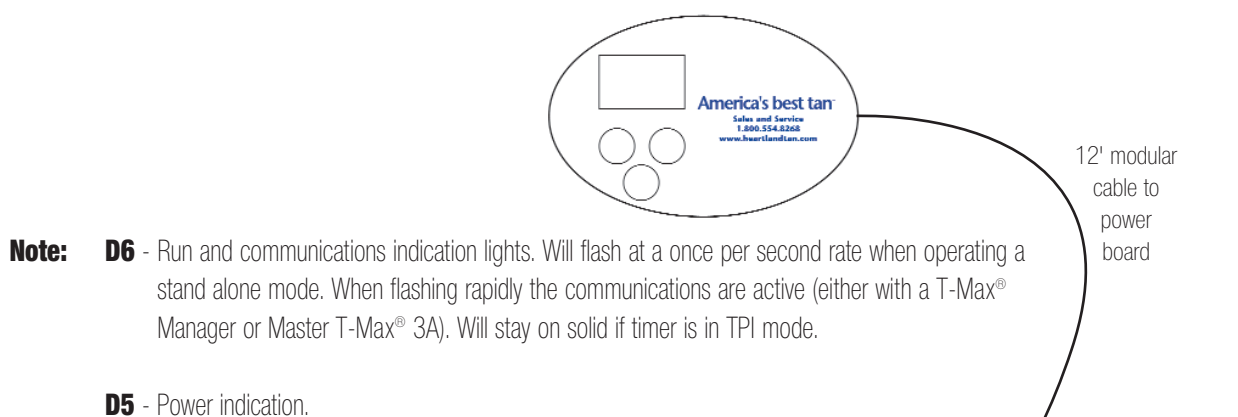


Figure B - Power Board Location


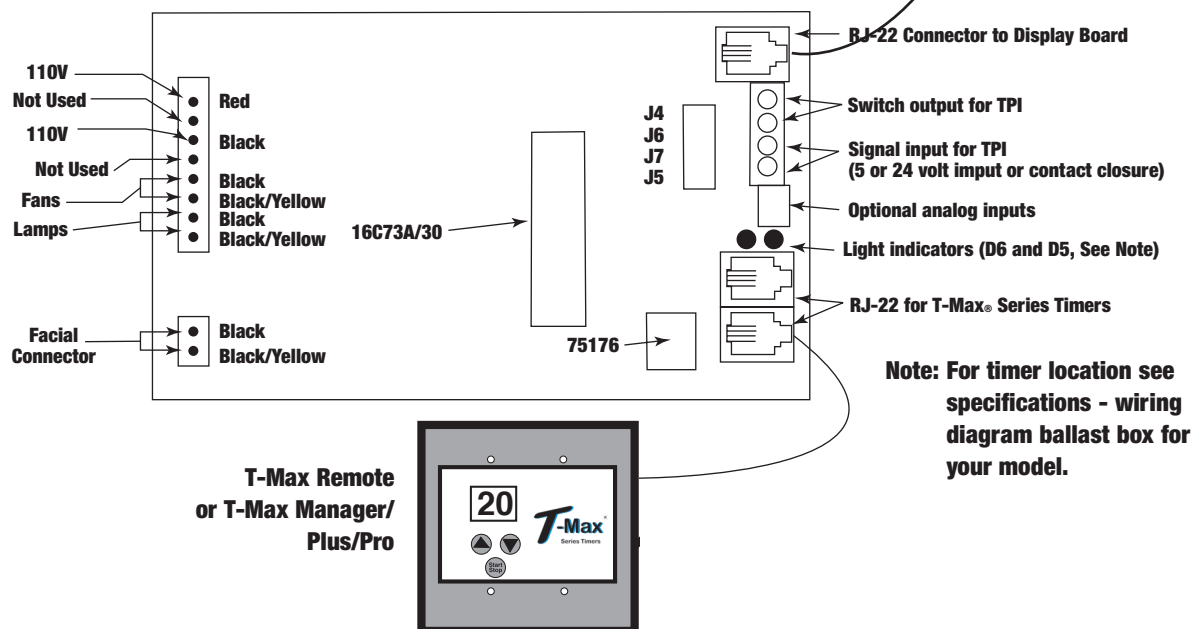



FIGURE C - Connecting the Heartland Timer to a T-Max® Series

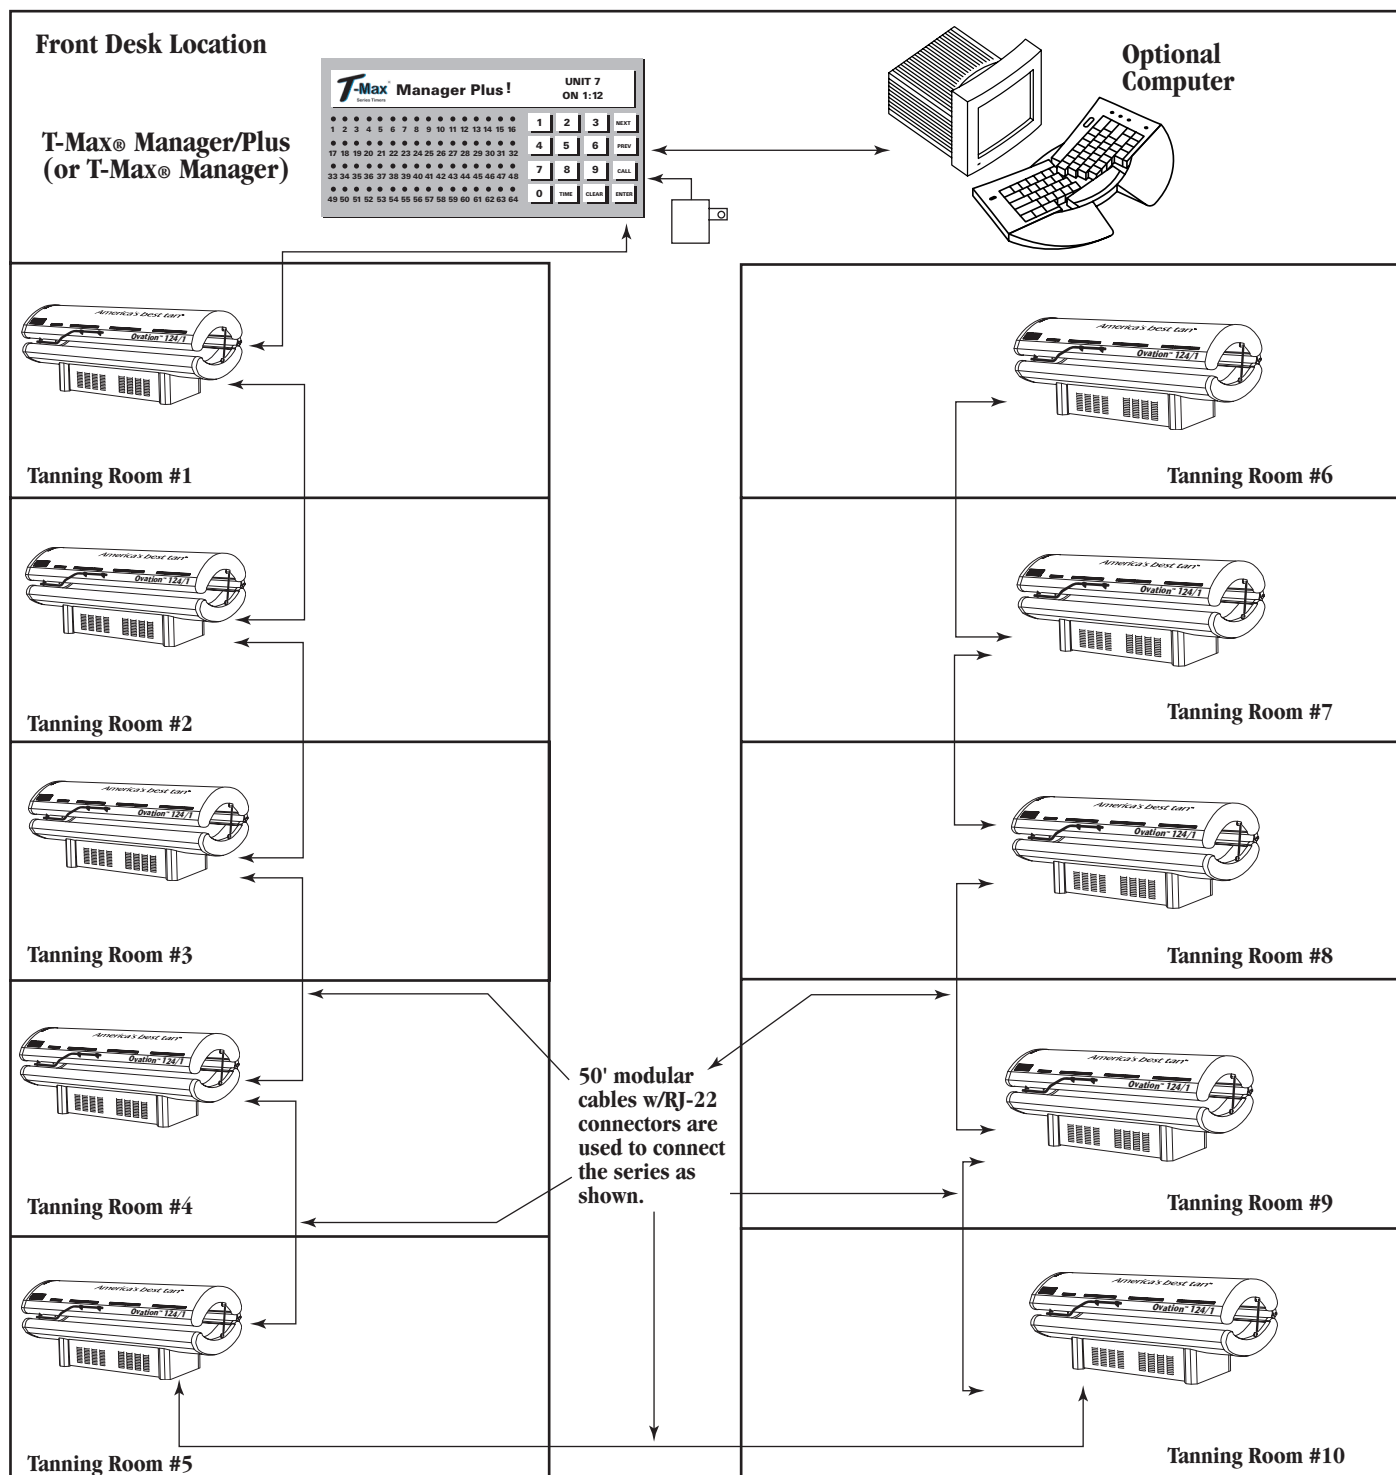


It does not matter in which order the rooms are connected. The only requirement is that there is a continuous connection from the T-Max® Manager through each room in the T-Max® Series daisy-chain.

Legacy Leg Tanner Wiring Diagrams


LEGACY WIRING DIAGRAM BALLAST BOX

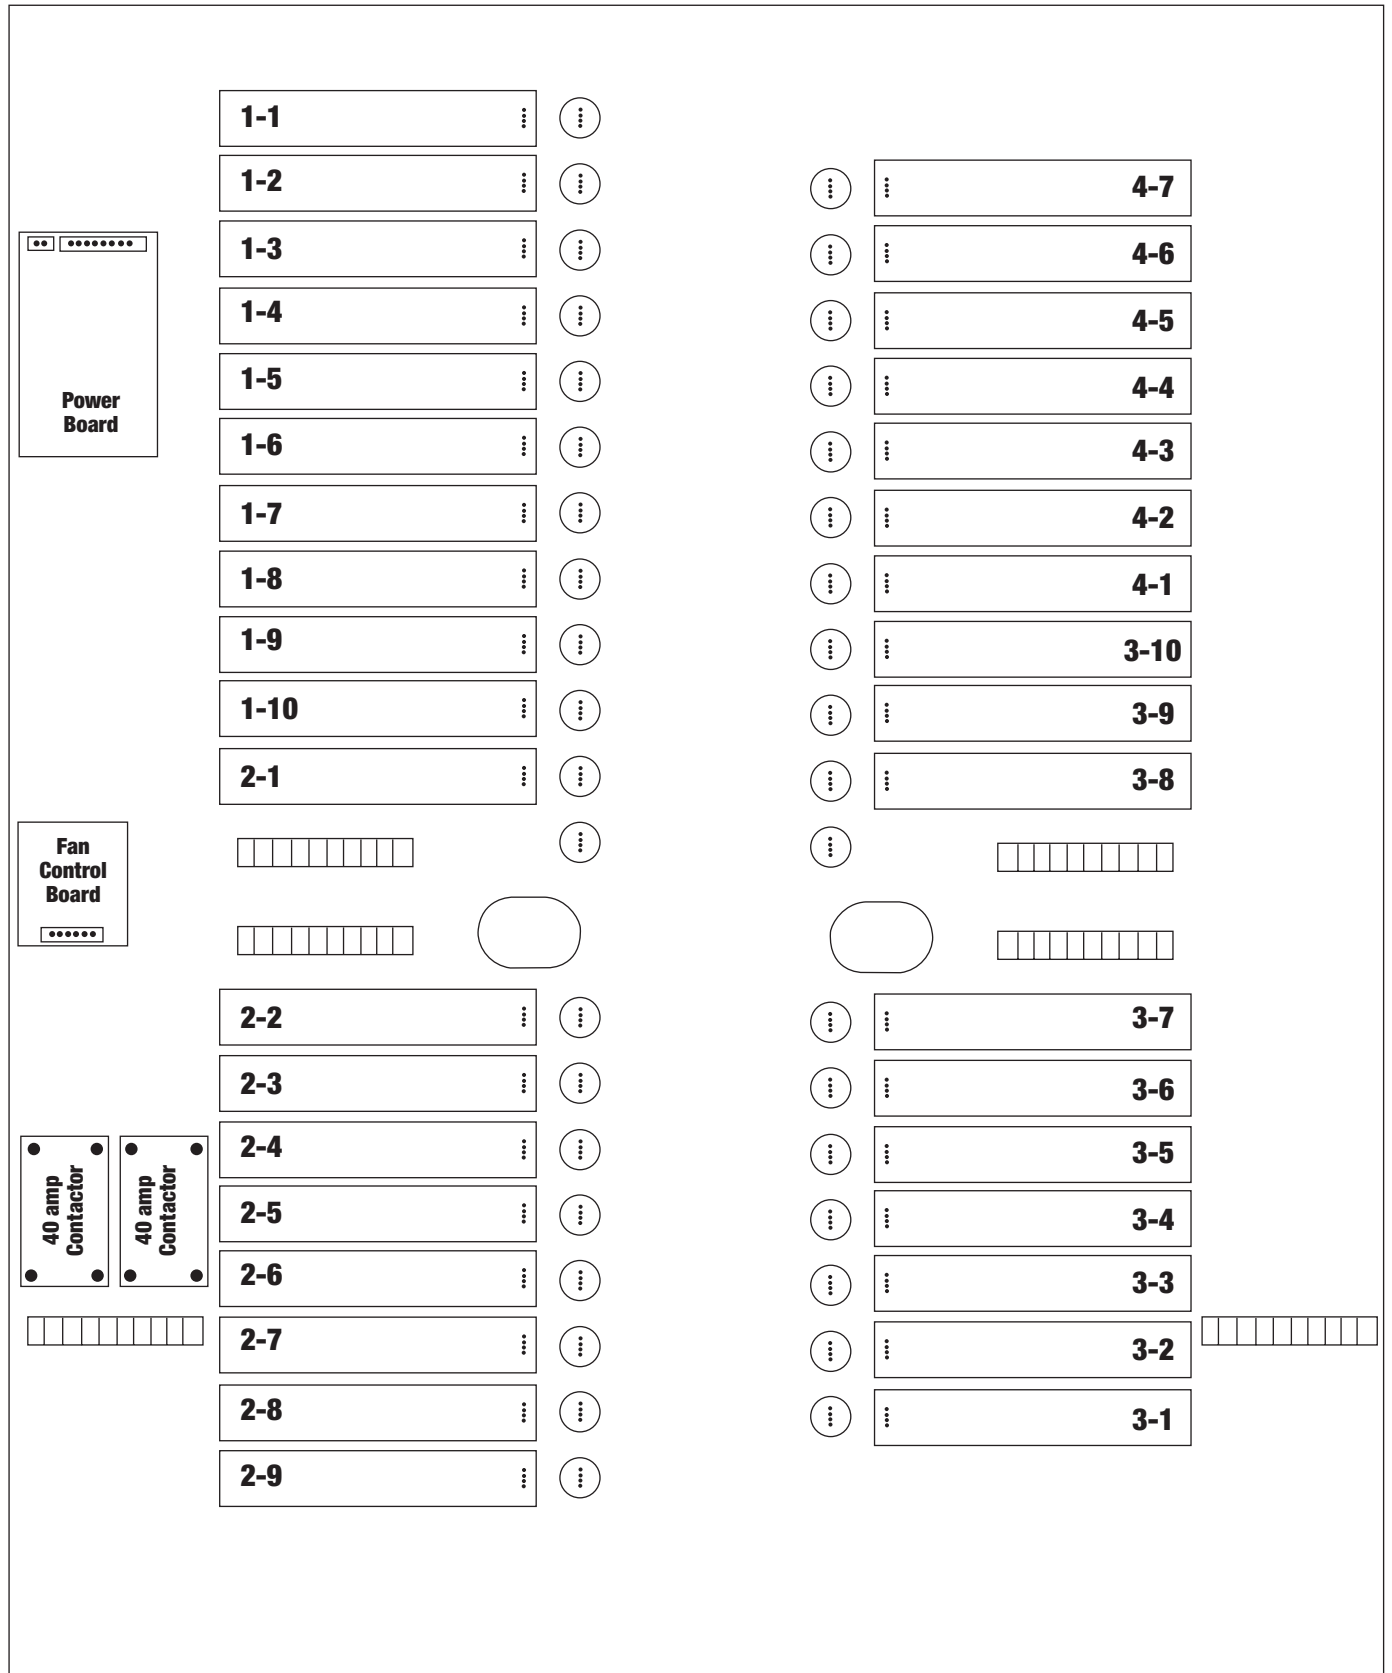

LEGACY WIRING DIAGRAM BALLAST BOX

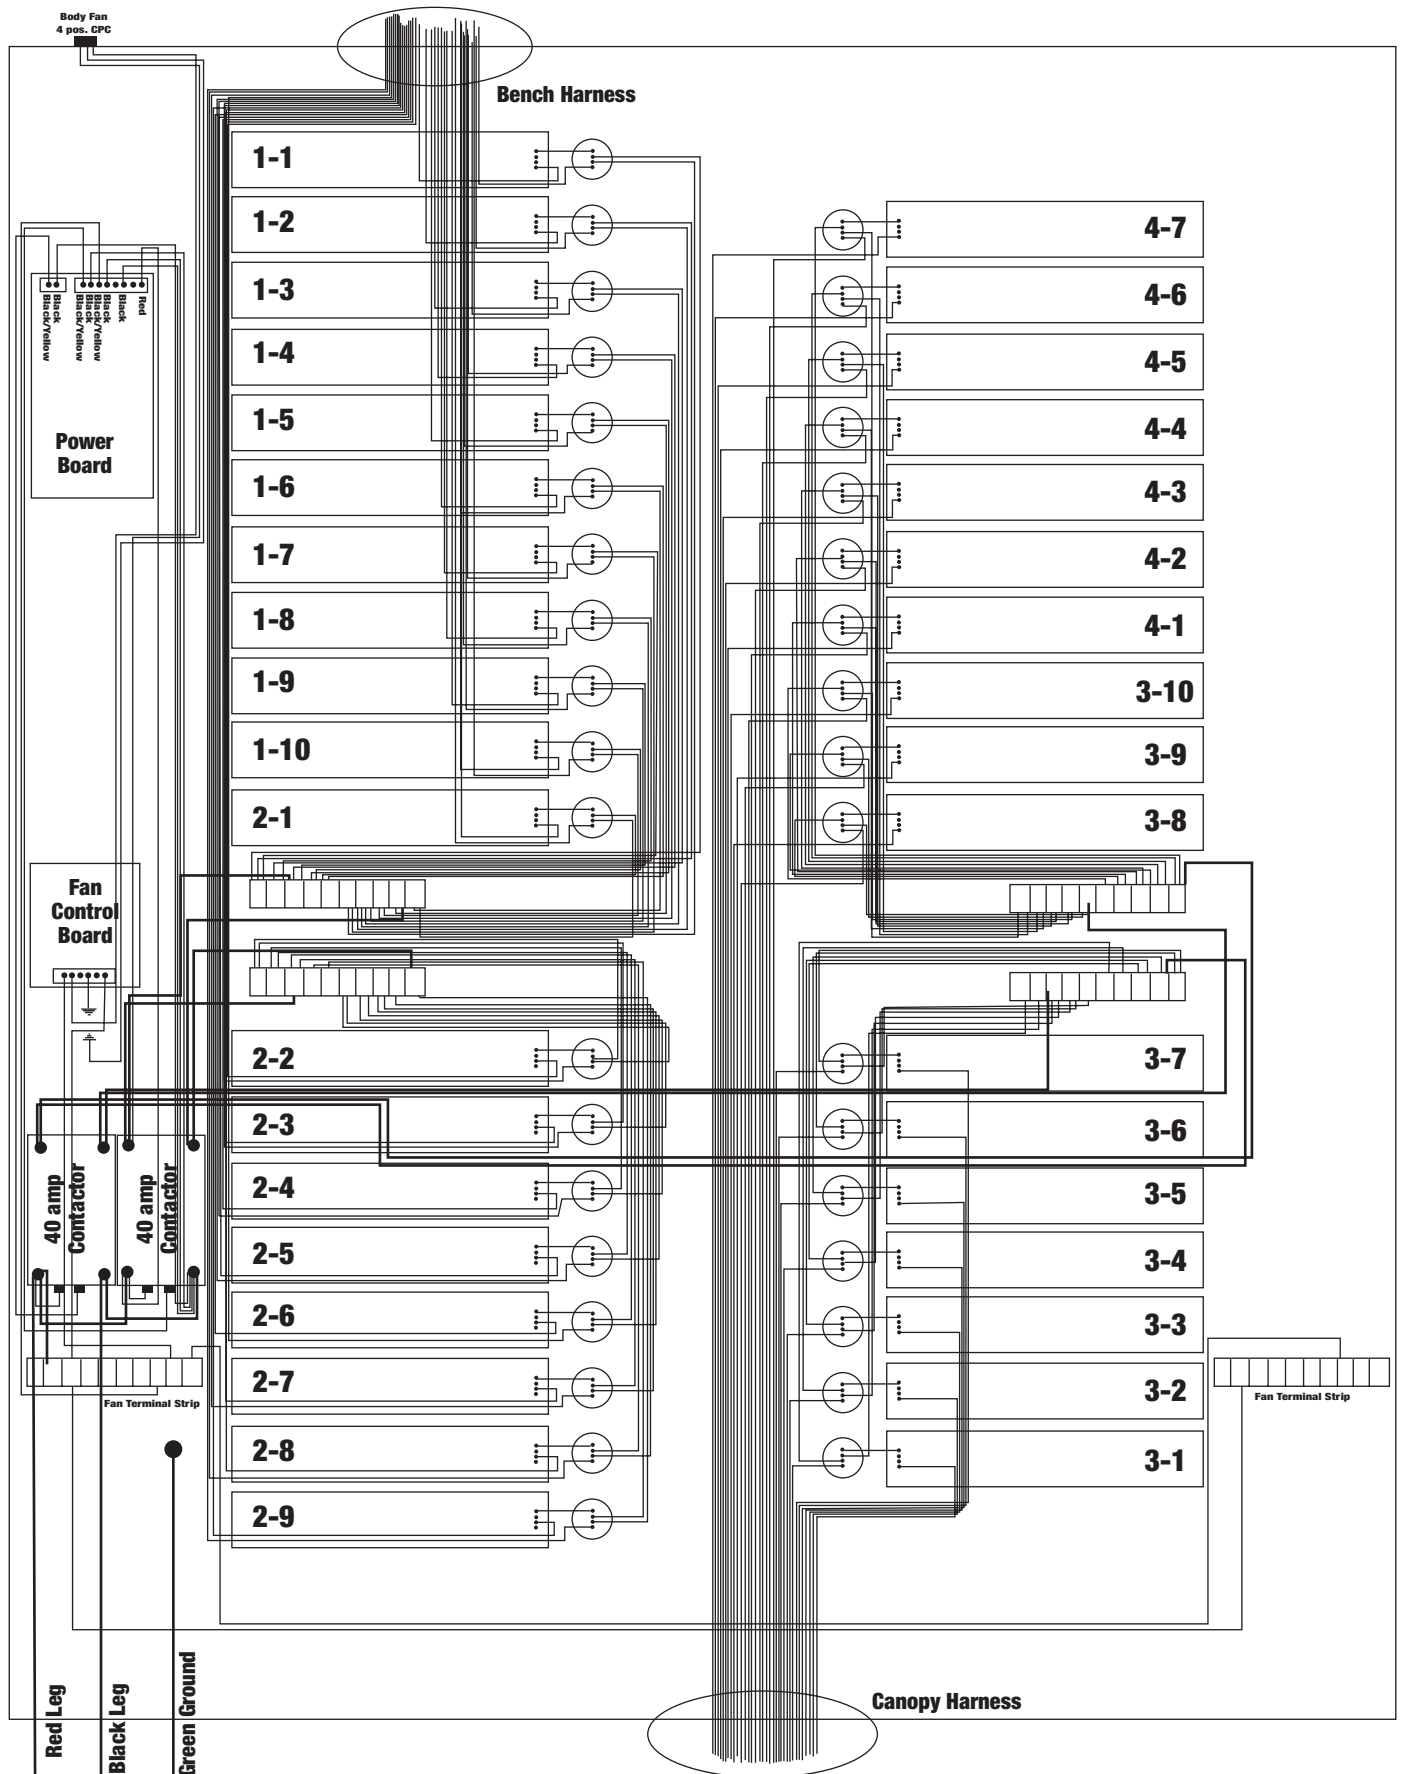

LEGACY LEG TANNER ELECTRICAL OVERVIEW

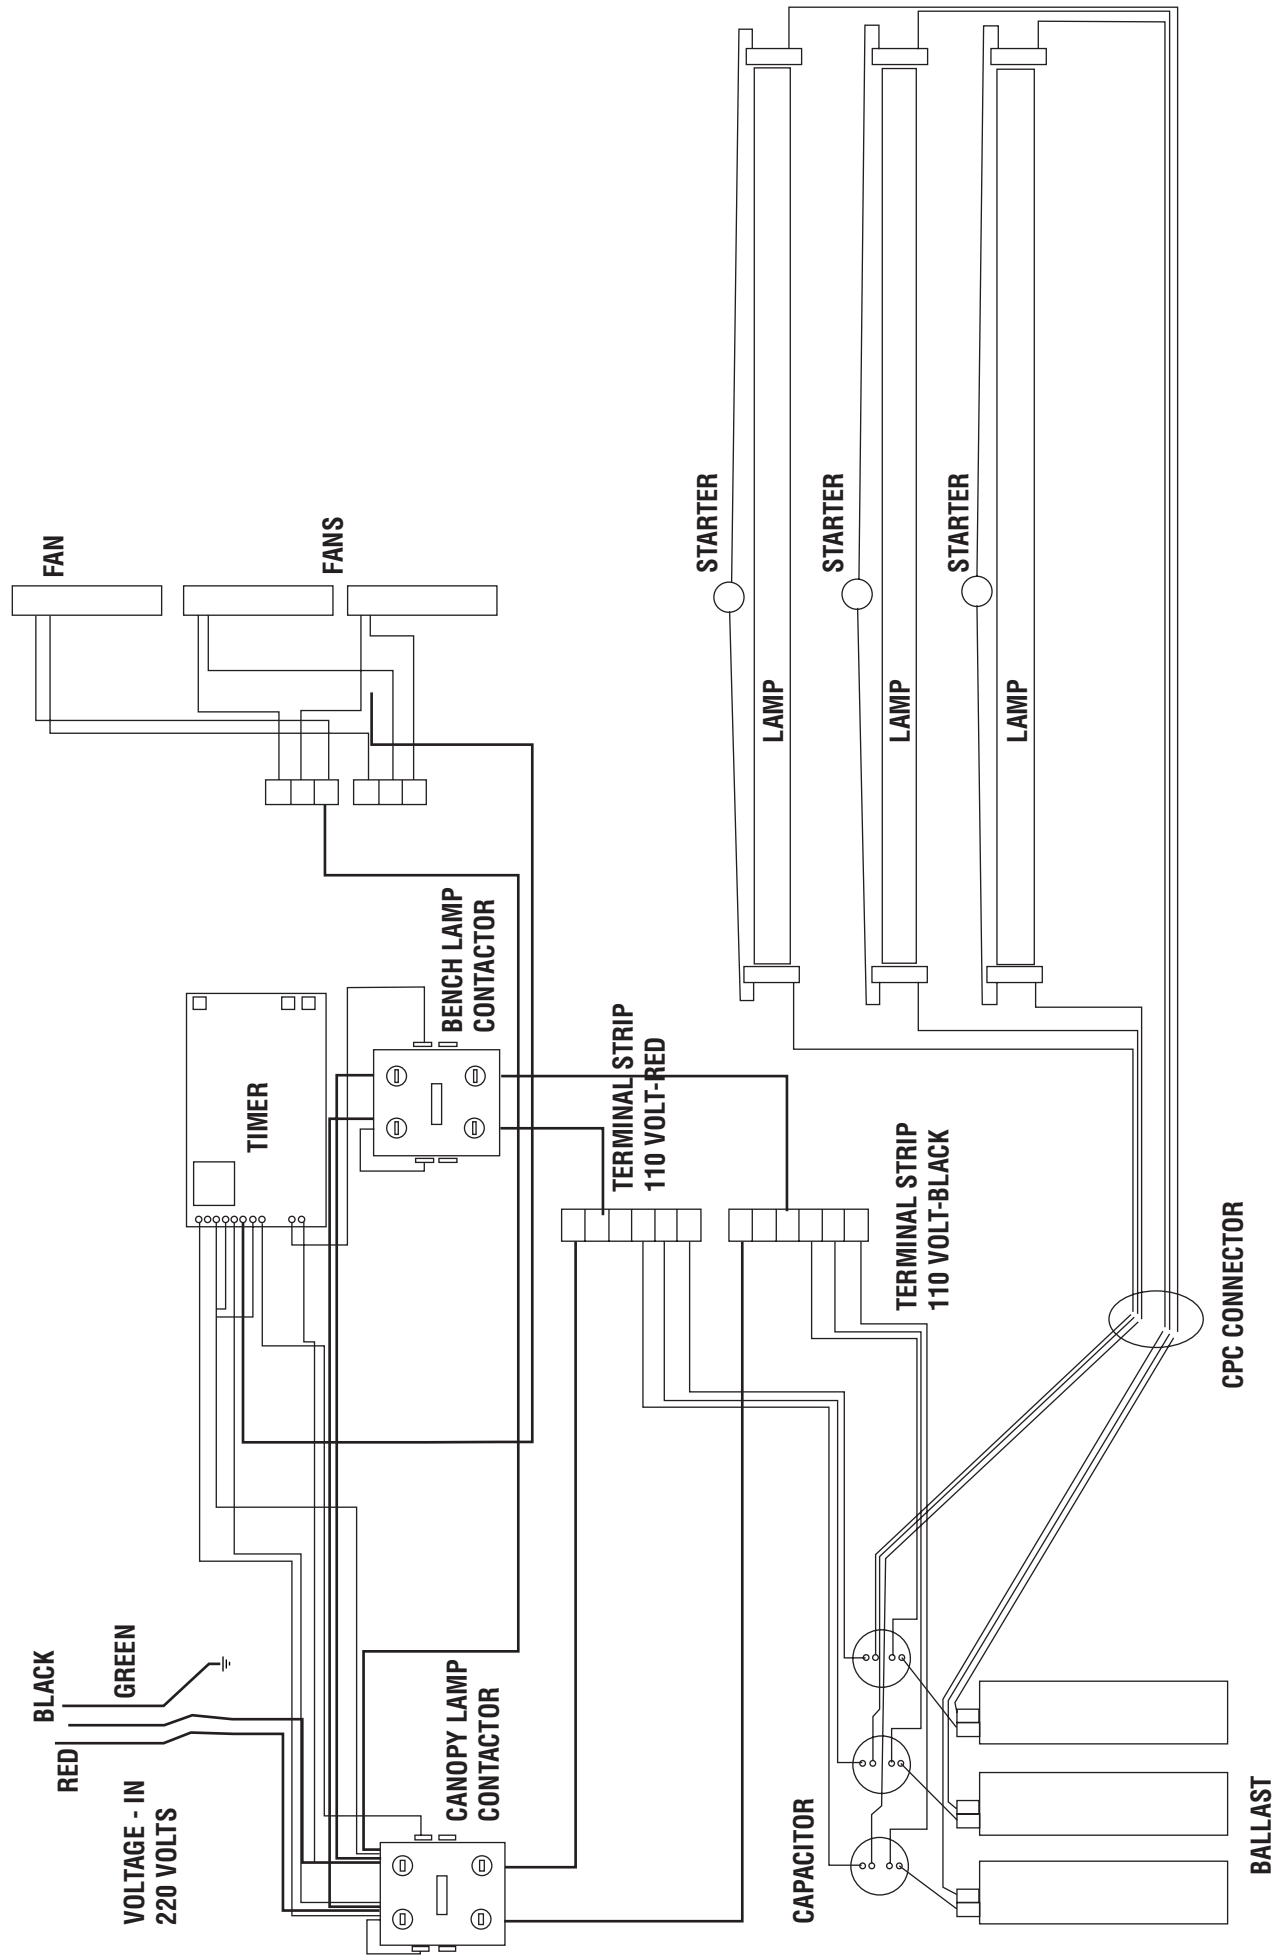

LIMITED WARRANTY

Heartland Tanning, Inc. warrants its products to be free from defects in materials and workmanship under intended normal use as described in the unit's Operation and Instruction Manual, for a period of three (3) years from date of sale.

This Limited Warranty applies only to the original purchaser of the equipment through Heartland Tanning, Inc. or its authorized dealer or distributor, and is not transferable.

Heartland Tanning, Inc.'s obligations under this warranty are limited to repair or replacement of any defective part without charge for that part to the original purchaser, with the following exceptions:

- A. Tanning lamps are warranted against defects for a period of sixty (60) days from date of sale.
- B. Three (3) year Limited Warranty on parts. Only parts obtained through Heartland Tanning, Inc., its authorized dealers or distributors may be used. Transportation cost for parts shipped to the consumer and the return of defective parts to Heartland Tanning, Inc. are not included.
- C. Labor will be furnished without charge for ninety (90) days from the date of purchase only. All labor and related charges must be authorized by Heartland Tanning, Inc. prior to start of repairs, and must coincide with Heartland Tanning, Inc. established rates and time allotment policy.
- D. All fans are warranted against defects for a period of three (3) years from date of sale.
- E. Timer system warranted for one (1) year.
- F. Acrylic, warranted for twelve (12) months.
- G. Shocks warranted for ninety (90) days.

It is imperative that the original customer completes and returns the enclosed warranty card within ten (10) days after purchase to insure valid registration and coverage for potential claims.

If the warranty card is not registered, proof of purchase from Heartland Tanning, Inc. or its authorized dealer or distributor will be required prior to any consideration on warranty claims. This could result in service delays.

This warranty is extended to the individual or legal entity, whose name appears on the warranty registration card filed with Heartland Tanning, Inc., or whose name appears on the original sale document and may not be transferred to any other individual or legal entity.

This warranty does not apply to any failure of the product or any parts of the product due to alterations, modifications, misuse, abuse, accident, improper maintenance, improper installation or if the serial number on the product has been removed, altered, or defaced. Adequate packaging must be used for returned goods to prevent freight damage.

THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND HEARTLAND TANNING, INC. NO PERSON, FIRM OR CORPORATION IS AUTHORIZED TO OBLIGATE HEARTLAND TANNING, INC. FOR ANY LIABILITY IN CONNECTION WITH THE SALE OR USE OF THESE GOODS.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

NOTICE: Any misuse, abuse, modifications, alteration, improper installation, etc. of this product or its intended use will subject said party to direct responsibility for any and all consequences resulting from such action. Furthermore, such actions will void all warranties and may relieve Heartland Tanning, Inc. of any liabilities relating to said product.